



ADJUSTABLE WREATH HANGER

MODEL #: V-10909


IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY

For assistance with assembly or installation, parts and customer service:





www.VillageLighting.com | Support@VillageLighting.com

Intended for indoor / outdoor use

Please lay out all parts prior to assembly or installation. Read instructions prior to assembly or installation.

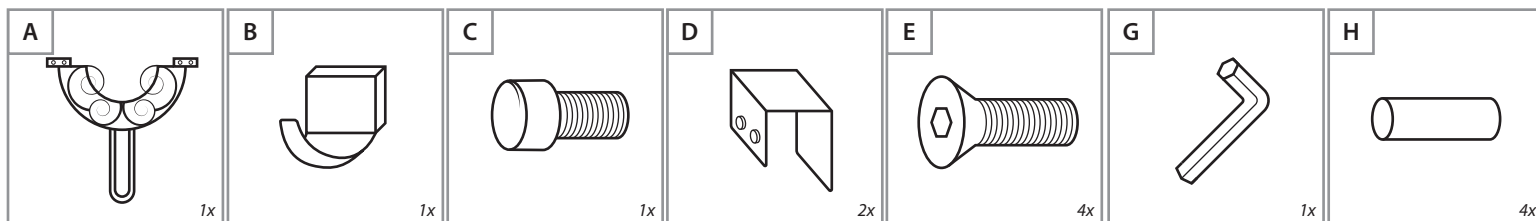

ASSEMBLY INSTRUCTIONS

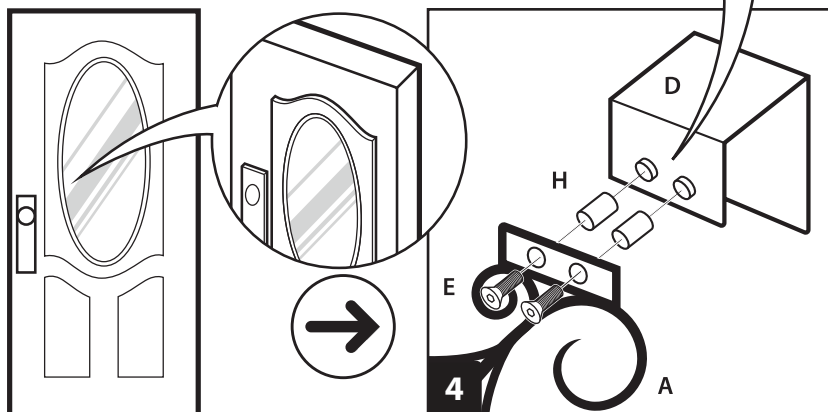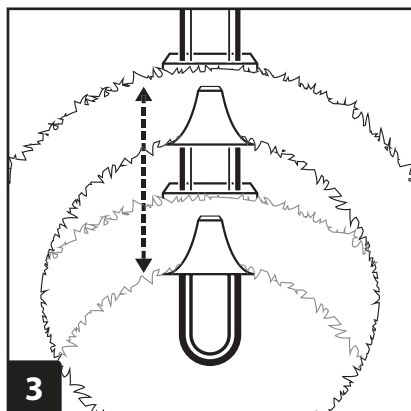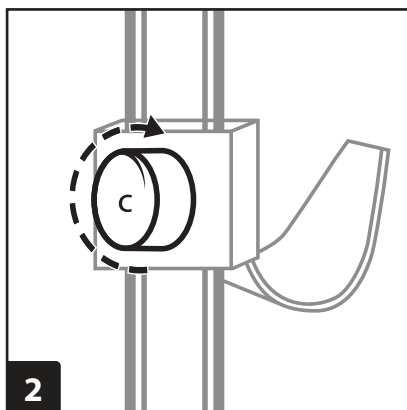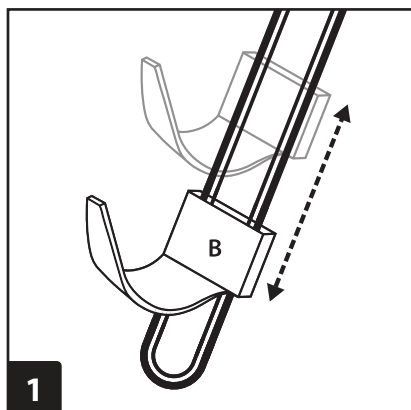

1. Slip on the front hook (B) to the base of the wreath hanger (A) and position at your desired height.

NOTE: The rear brackets should be facing away from you when attaching the front hook.

2. Once you have your desired height, twist the back pad (C) clockwise until the hook is tightly secured.

3. Hook the wreath hanger over the top of the door and place the wreath on the front hook. Readjust the wreath hook to your desired height by repeating steps one and two.

4. If your door has raised moldings or a front window, put the longer screws (E) through iron base toward the back of the hanger. Then, screw on the spacers (H) and reattach the rear hooks (D) with the provided Allen wrench (G).